



How to update the Firmware on the SKROSS Wireless Audio Adapter

Installation of the Firmware program

- 1.) Unzip the file: SKROSS Wireless Audio Adapter.zip:

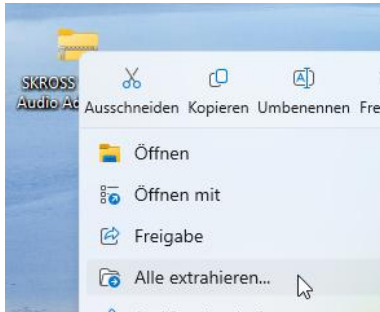


- 2.) Then open the newly extracted folder and double-click on setup.exe:

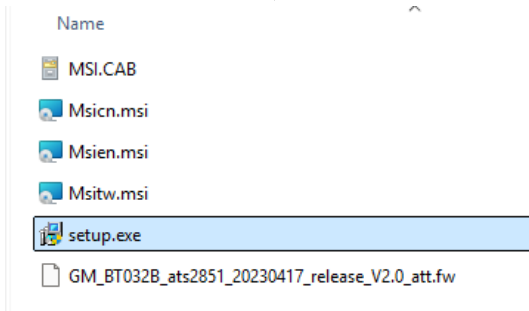

Note: You need administrator rights for the installation



- 3.) Follow the installation process:

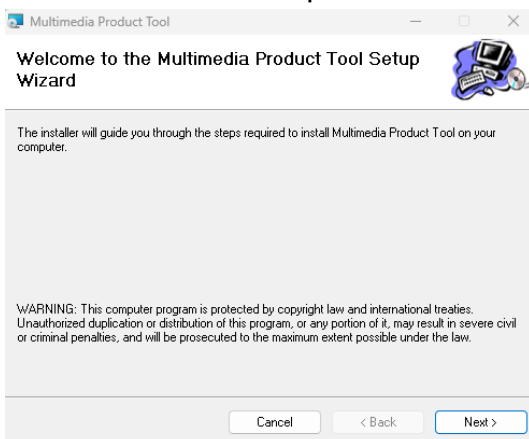


Remember the folder you have selected for the installation location.





See below the default folder:

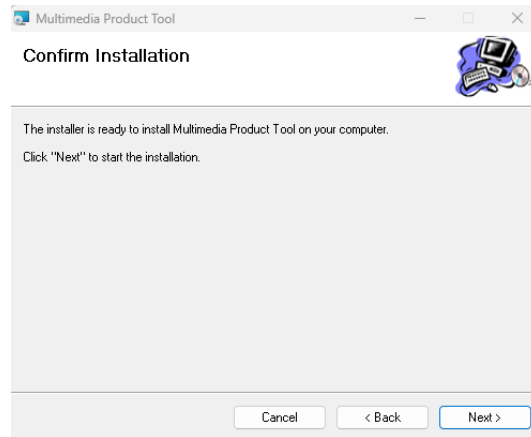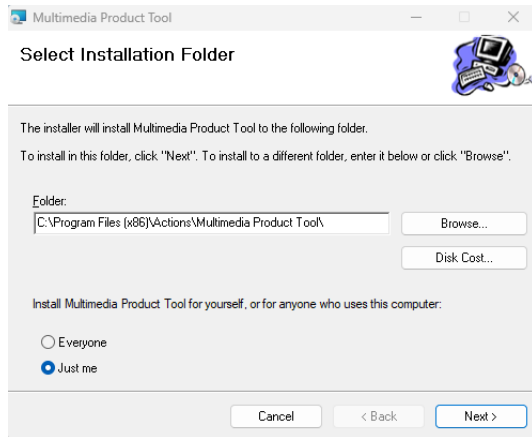

There is no need to agree on the Customer Experience Improvement Program below, simply remove the checkmark from the box (it is automatically checked already) and click next if you do not want to participate:

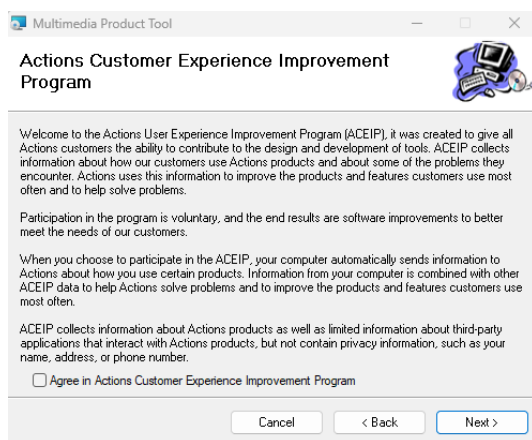


After the installation, please restart your computer:

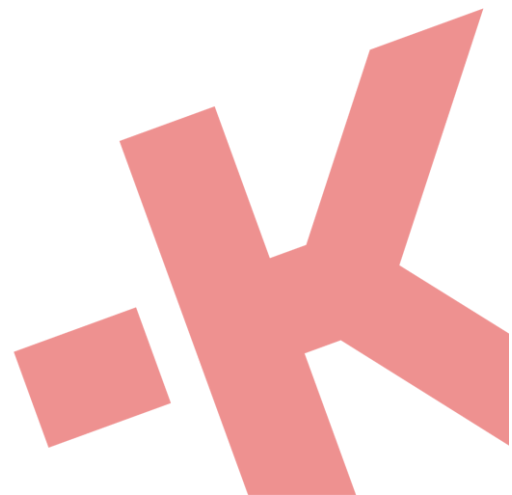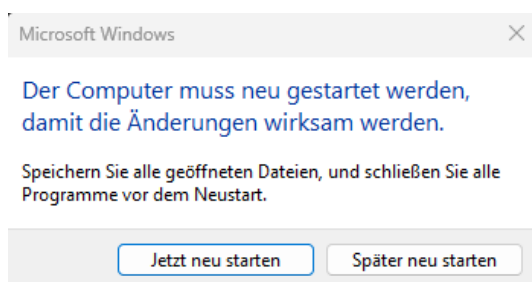



Start the Program

1.) Go to the location where you have installed the program and double-click on launch.exe:


Note: Administrator rights needed

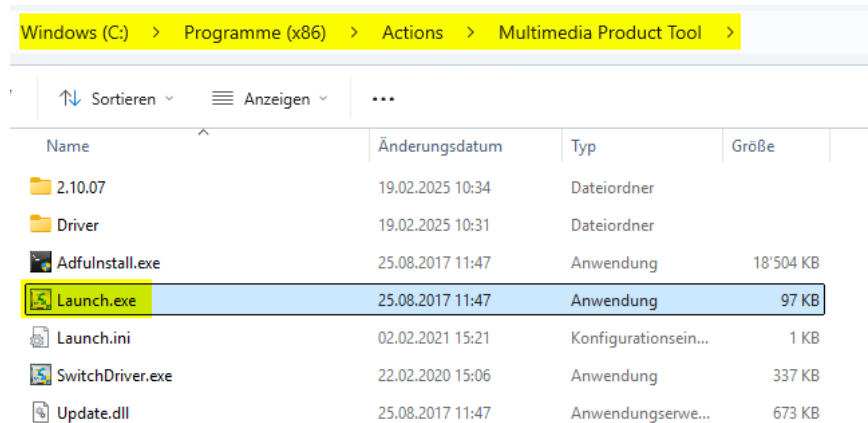


2.) The program starts and asks directly for the location of the Firmware file:

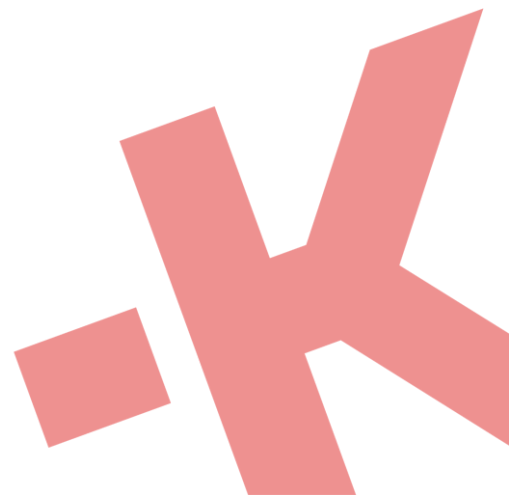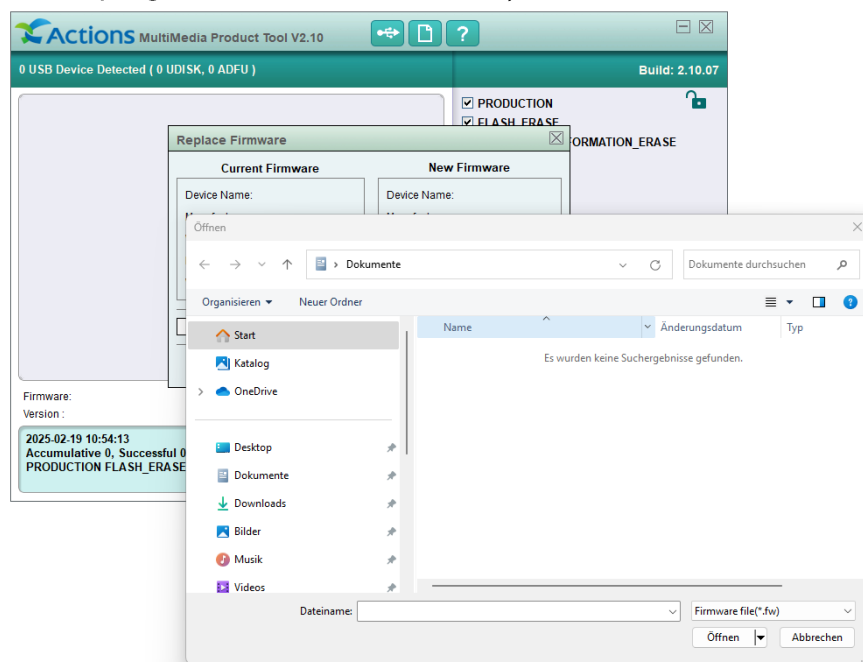


3.) You will find the file in the extracted folder of the downloaded .zip file:

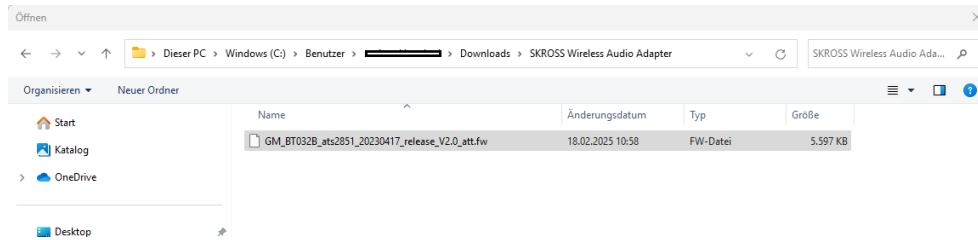

4.) Select it and click on "Open":

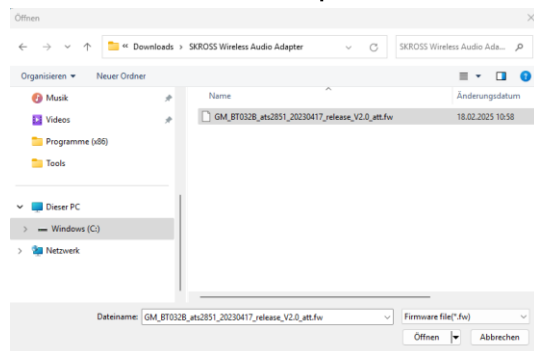

5.) Select "Replace":

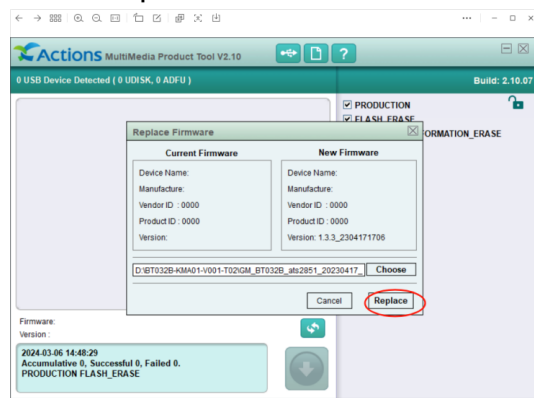

6.) **Very Important** - Select PRODUCTION and RESTART only:




Prepare the Wireless Audio Adapter for the update:

- 1.) Push the device to OUT transmit state and hold the power button for 3 seconds to turn it on.
The LED is blinking BLUE (for devices with only a white LED, the update is not possible. Please contact info@skross.com for help.)



- 2.) Wait for a minimum of 3 seconds and then connect the device via USB-C cable to the computer. Please note: A **USB-C cable with data communication function is needed**. The short USB-C cable which was included with this product only has charging capabilities and does not work in this case.
- 3.) Once the device is connected, quickly press the power button three times. The LED will flash **PURPLE**. It may take several tries until it works, you must press the button extremely fast.
- 4.) Now you can start downloading the firmware with the program:

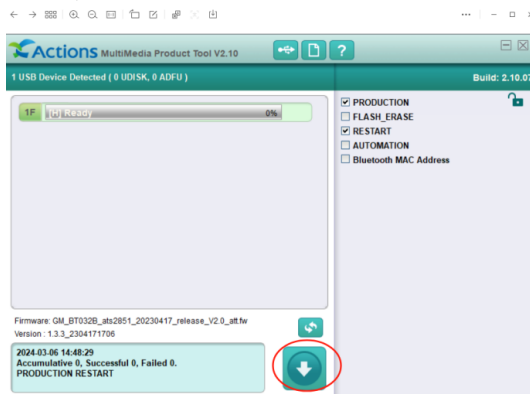

- 5.) Once the installation is at 100%, the upgrade is complete, and you can remove the USB-C cable.

